

7

Dispenser assembly: Firmly attach the nozzle to the cartridge and attach the nozzle cover. Assemble threaded piston, housing disc and filled cartridge.



8

Your Patron EOS Dispenser is ready to use.



MANUAL FILLING OF BIA CARTRIDGES USER MANUAL

RECOMMENDATION: For faster filling of cartridges we strongly recommend to use Patron ATHENA Filling station.



Pictures and instructions are applicable to **EOS dispensers** and **BIA cartridges**.
Store dispenser properly after use.

*Pictures are applicable to 2 mL and 5 mL cartridges

Assembly guidelines

1

Close the cartridge with the cartridge cap



2

Pour the substance into the cartridge. Maximum 5 mL into 5 mL cartridge and max. 2 mL into 2 mL cartridge.

MAX to top line →



3

Start inserting the gasket by first leaning the side tip of the gasket to one side of cartridge's edge. Then first slowly push the side tip and then the whole gasket down into cartridge.



4

Insert the cartridge into the Patron EROS USB Heater for up to 5 minutes to make your substance less viscous. Then take out the cartridge and place it in the upright position with gasket below.




5

When all the substance drips down and settles at the bottom, remove the cartridge cap to release the air.



6

Carefully shove the gasket into the cartridge with the piston to squeeze out the remaining air.

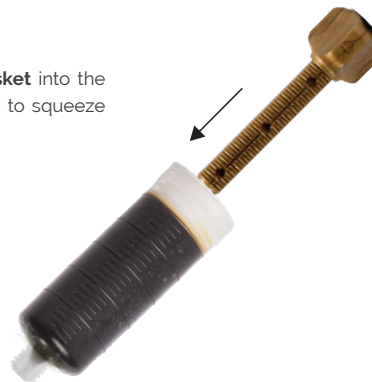

Caution: Do not leave a cartridge in a USB heater longer than 7 minutes.